

F24-60 Wiring Diagram(Standard)

F24-60 输出接线图 (标准機種)

Common line 公共线	Relay contact 继电器接点	Command 功能	Wire No 线号	Remark 功能标注	
		AC-1	2-1	电源-1	
		AC-2	2-2	电源-2	
		MAIN-IN	2-3	总停-入	
		MAIN-OUT	2-4	总停-出	
		COM 1	2-21	公共线-1	
		COM 2	2-22	公共线-2	
		COM3	2-23	公共线-3	
		COM4	2-24	公共线-4	
		Ry1	F1	1-1	备用键F1
		Ry2	R0/START	1-2	备用键R0
		Ry3	R1	1-3	备用键R1
		Ry4	R2	1-4	备用键R2
		Ry5	R3	1-5	备用键R3
		Ry6	R4	1-6	备用键R4
		Ry7	SW A	1-7	2位置开关(A)
		Ry8	SW SA	1-8	3位置开关(B)-1
		Ry9	SW SB	1-9	3位置开关(B)-2
		Ry10	SW CA	1-10	3位置开关(C)-1
		Ry11	SW CB	1-11	3位置开关(C)-2
		Ry12	SW D	1-12	2位置开关(D)
		Ry13	1Y(U)1	1-13	左摇杆-上1
		Ry14	1Y(D)1	1-14	左摇杆-下1
		Ry15	1Y(U/D)2	1-15	左摇杆-上/下2
		Ry16	1Y(U/D)3	1-16	左摇杆-上/下3
		Ry17	1Y(U/D)4	1-17	左摇杆-上/下4
		Ry18	1Y(U/D)5	1-18	左摇杆-上/下5
		Ry19	1X(L)1	1-19	左摇杆-左1
		Ry20	1X(R)1	1-20	左摇杆-右1
		Ry21	1X(L/R)2	1-21	左摇杆-左/右2
		Ry22	1X(L/R)3	1-22	左摇杆-左/右3
		Ry23	1X(L/R)4	1-23	左摇杆-左/右4
		Ry24	1X(L/R)5	1-24	左摇杆-左/右5
		Ry25	2Y(U)1	2-5	右摇杆-上1
		Ry26	2Y(D)1	2-6	右摇杆-下1
		Ry27	2Y(U/D)2	2-7	右摇杆-上/下2
		Ry28	2Y(U/D)3	2-8	右摇杆-上/下3
		Ry29	2Y(U/D)4	2-9	右摇杆-上/下4
		Ry30	2Y(U/D)5	2-10	右摇杆-上/下5
		Ry31	2X(L)1	2-11	右摇杆-左1
		Ry32	2X(R)1	2-12	右摇杆-右1
	Ry33	2X(L/R)2	2-13	右摇杆-左/右2	
	Ry34	2X(L/R)3	2-14	右摇杆-左/右3	
	Ry35	2X(L/R)4	2-15	右摇杆-左/右4	
	Ry36	2X(L/R)5	2-16	右摇杆-左/右5	
	Ry37	(AUX)1	2-17		
	Ry38	(AUX)2	2-18		
	Ry39	(AUX)3	2-19		
	RY40	(AUX)4	2-20		